




JOINING PROCEDURES FOR DRY METHOD


JOINING PROCEDURES FOR FIBERGLASS REINFORCED PLASTIC (FRP) RESIN FABRICATORS DRY METHOD INSTRUCTIONS

Job Preparation: Thoroughly clean and dry area to ensure adhesion.


UNDERSLAB DUCT JOINTS BELOW SLAB RECOMMENDED METHOD

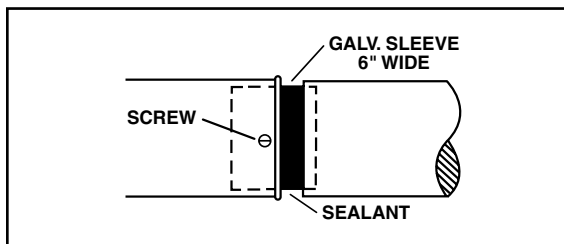

1. Wipe dirt and dust from duct ends, secure sleeve inside duct with sheet metal screws.

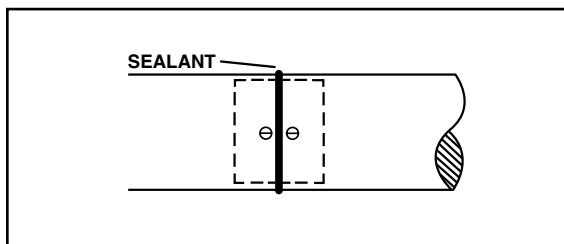

2. Apply extruded bead of non-hardening waterproof mastic.
Press joining duct tightly against mastic, forming a seal.
Secure with screws.

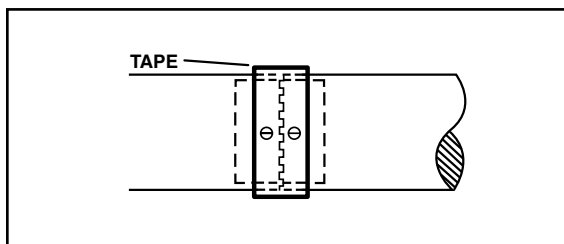

3. Wrap joint with tape, covering screw heads.

Note: Leak test the system before backfilling.